FLASH F10XX 10.1" LCD position indicators with audio







Applications

Car-OP position indicator Hall position indicator



Display features

Up to 3 inches characters Automatic centering Up to 3 Digits Viewing angle of 160 degrees 16 millions colors 1280 x 800 resolution Portrait/Landscape



Audio features

3 watt amplifier Voice annunciation Arrival Gong Fully configurable (WAV/MP3) External speaker



917 Mgr Grandin, Suite 304B Quebec City Québec, Canada G1V 3X8 1 418 476-4802 info@vidatech.ca

TO ORDER :



Voice

"0": None

"1": Arrival gong "2": Voice

Input "2" : CanBus "6" : CanBus + vPixel


F102X – CANBus 10" LCD indicator



No voice

F1022 CANBus 10" LCD indicator with voice

With voice

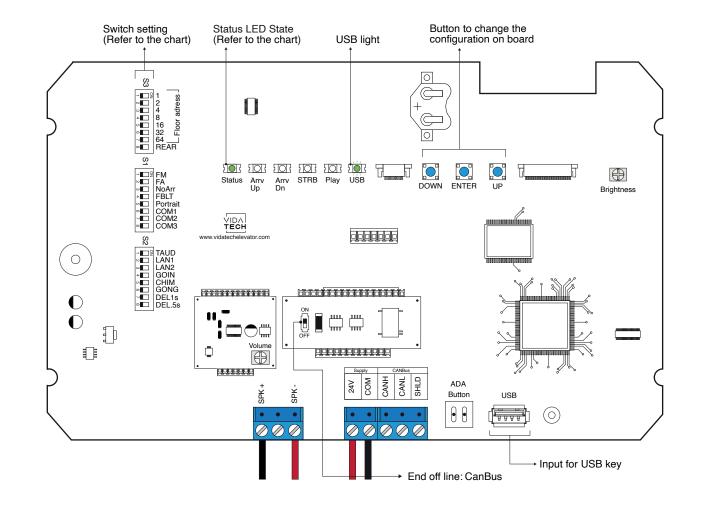

- Supply must be between 16VDC to 28VDC.
- Speaker must be 4Ω to 45Ω , 5Watts minimum.
- Up to 12 minutes 38 seconds of message time.
- Speaker wire length must be less than 500 feet to prevent noise.
- .via files are for audio configuration. Only one .via file must be present on the USB dongle.
- .via and visual files must be place on the root of a USB dongle, then connected to a powered voice until the USB light stops blinking.
- Must be installed in COP.
- · Brightness of the LCD is controlled by "brightness" potentiometer.
- Volume of the voice annunciator is controlled by "volume" potentiometer.
- Press ENTER to go the main menu of the LCD, then navigate with UP/DOWN switches. Refer to F7022 operation manual on our website.
- Switch setting :

SW #	#	Text															De	es	cri	pt	ior	١													
S2	1	FM	0	N ->	> B	lanł	< th	e di	spla	ay i	n fii	re n	nod	е																					
	2	FA	0	N ->	> B	lanł	< th	e di	spla	ay i	n fii	re a	lter	nat	e m	ode)																_		
	3	NoArr	0	N ->	> B	lanł	< th	e ai	rov	/																									
	4	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)																																
	5	Portrait	ON -> Portrait mode (If existing within the config)																																
	Con	nmunication	CAN Vidatech												CAN JRT									CAN GAL											
	6	COM1												•																					
	7	COM2																						•											
	8	COM3																																	
S1	1	TAUD	0	ON -> Play all audio file saved in memory																															
	2	GOING	0	ON -> Going Up/Dn active																															
	3	CHIM	0	ON -> Passing Chime active																															
	4	GONG	ON -> Cabin gong active																																
	L	anguage	French										English						1 - French 2 - English							1 - English 2 - French									
	5	LAN1											•													•									
	6	LAN2													•												•								
	7	DEL1	ON -> Add 1 second of silence after the												ie strobe																				
	8	DEL5	0	ON -> Add 0.5 second of silence after the strobe																															
S3	Adre	esse Floor	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	1	1		•		•		•		٠		•		•		•		•		•		•		•		•		•		•		٠		•	
	2	2			٠				•	•			•	•			•	•		Γ	•	•			•	•			•	•			•	•	
	3	4					•	•	•	•					•	•	•	•		Γ	Γ		•	•	•	•					٠	٠	•	•	
	4	8									•	•	•	•	•	•	•	•									•	•	•	•	٠	٠	•	•	
	5	16																	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	
	6	32																																	•
	7	64																																	
	8	REAR	0	N ->	> In	stal	led	on	the	rea	ır																								

